

INTRODUCTION


The **TxConfig-HART** is a configuration interface for transmitters with HART protocol. It can be used together with the configuration software TxConfig.

INTERFACE INSTALLATION

In the TxConfig-HART model there is a USB communication interface, which must be connected to the available USB port. Windows will request the proper driver installation, which is found in the CD that is provided with the transmitter.

CONFIGURATION

Configuration is achieved by means of the configurator software with the **TxConfig-HART** interface connected to a USB port.

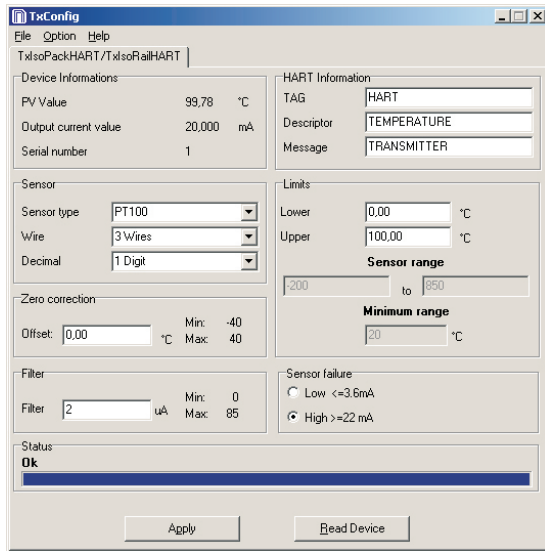

PC CONFIGURATOR



FEATURES

- Easy installation
- USB communication with the PC and serial with the transmitters
- Pins to HART device: polarity insensitive test clips
- Compatible with USB 1.1 and 2.0
- Rx/Tx LED indicators
- Power: no external power supply required
- Operation Temperature: 0 to 50 °C
- Storage Temperature: -40 to 80 °C
- Humidity: 0 to 95 % (no condensing)
- Isolation: 1500 Vdc galvanic isolation between transmitter and PC
- Operation System: Windows 2000 / XP / Vista and Windows 7
- Dimensions: 70 x 45 x 18 mm

TEMPERATURE TRANSMITTER C

ELECTRICAL CONNECTIONS

